PHILIPS

14 AA 35 27

PHILIPS

Downloaded from www.Manualslib.com manuals search engine

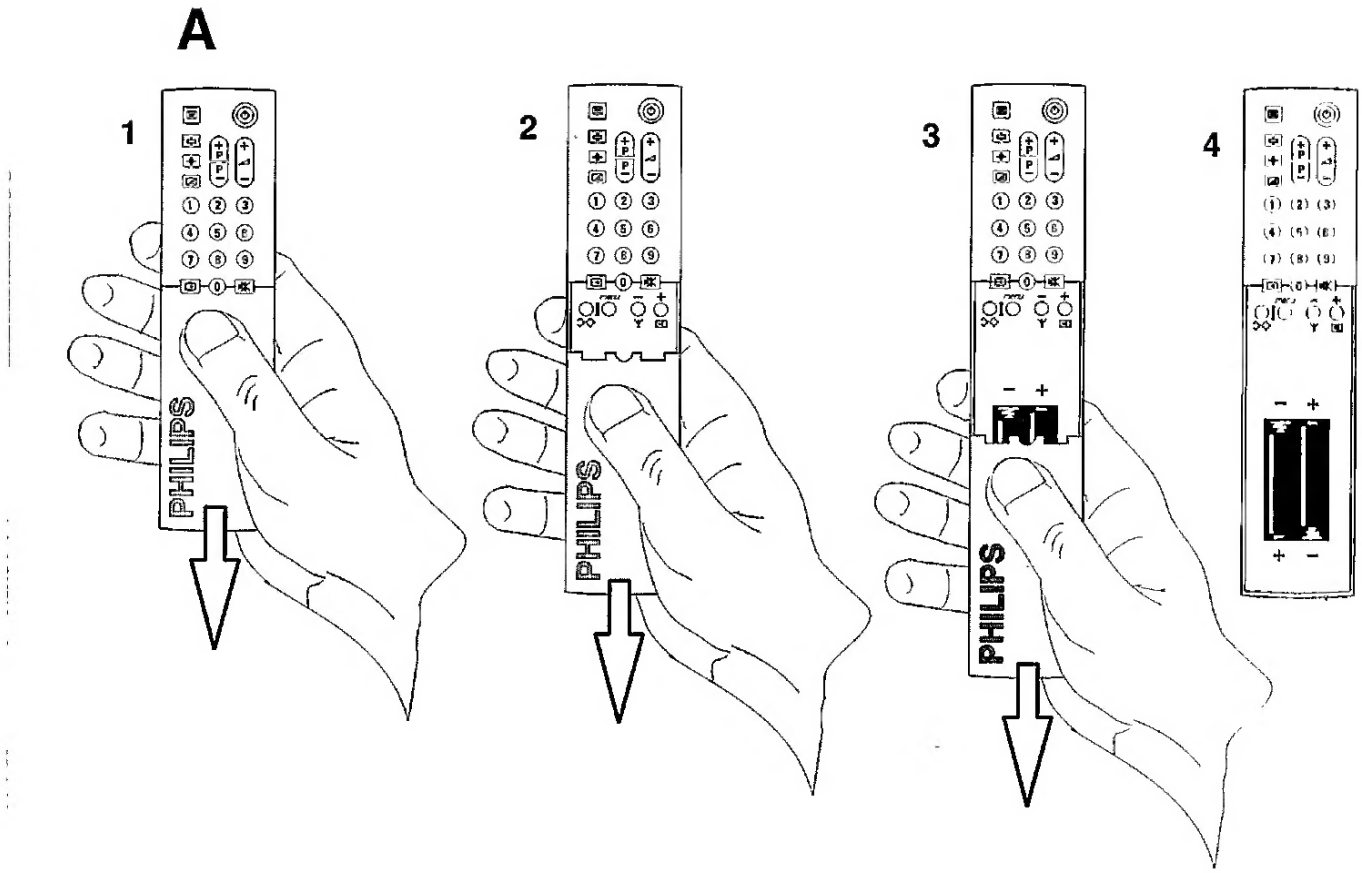

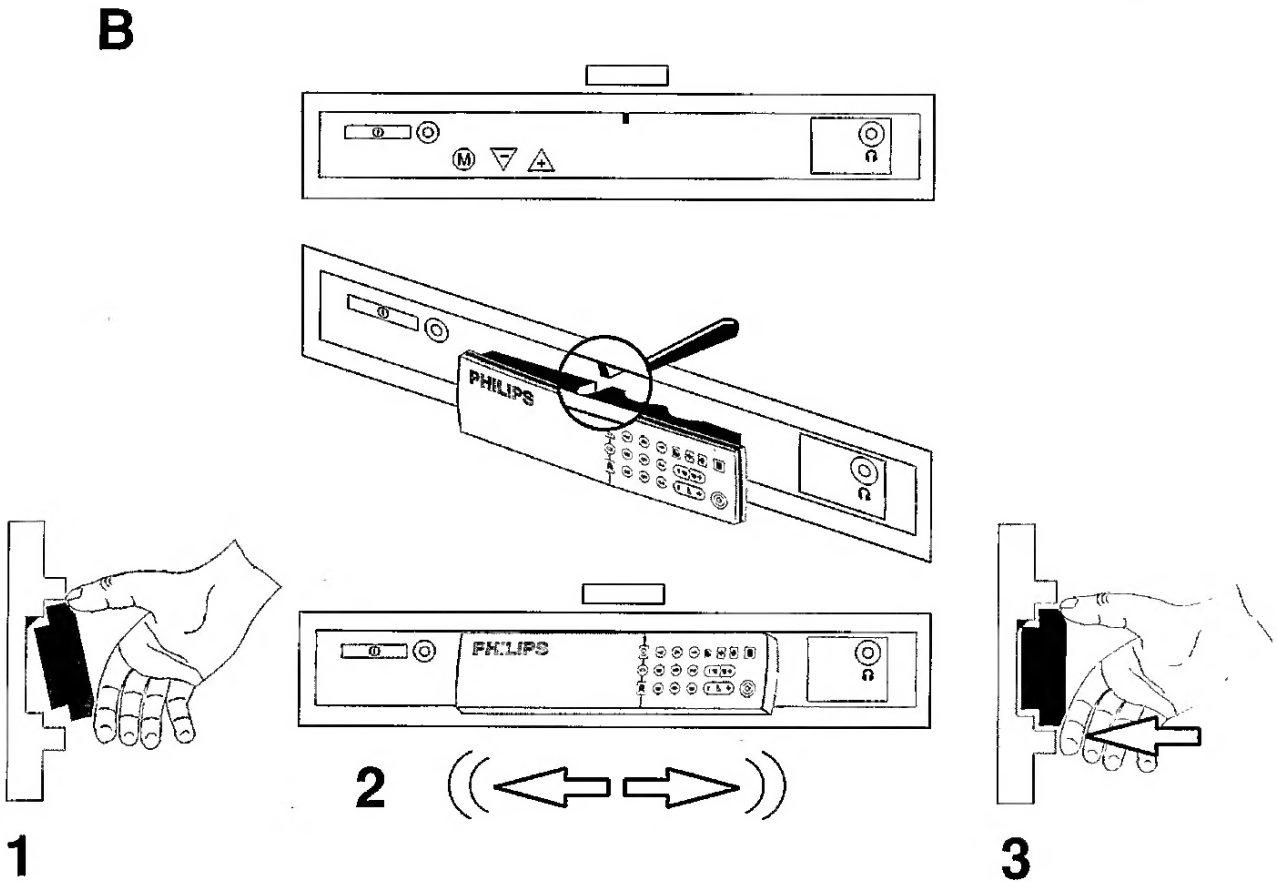

Downloaded from www.Manualslib.com manuals search engine

Installation

Follow the instructions very closely and step by step.
- ◦ This circle in front of a sentence indicates that you have to do something.
- ▷ This arrow in front of a sentence indicates the result of what you have done.

This bar in front of a sentence indicates help information.

Place tha TV on a solid bese.
Leave at least 3 cm around each side of the TV for ventilation.

The TV can only operate at a mains voltage of 220/240 V~, 50 Hz; consult your dealer if the mains supply is different.

- ◦ Connect the TV tightly to the mains supply socket.
- ◦ Connect tha aerial (indoor or outdoor) plug to the "⊓" socket on the back of the TV.

Make sure that the connection facilities to any TV installed in your house are in good condition. Only use good quality aerial connectors and cables.
The aarial plugs should be tightly connected.

Small scraan TV's are equipped with a high performance indoor aerial, nevertheless in soma circumstences (specific regions or if surrounded by high buildings) reception problems could occur. Further improvement of reception could be obtained by:
- Rotating or varying the angle of the aerial.
- Using other aerial executions.
- Connecting your TV to an outdoor aerial.

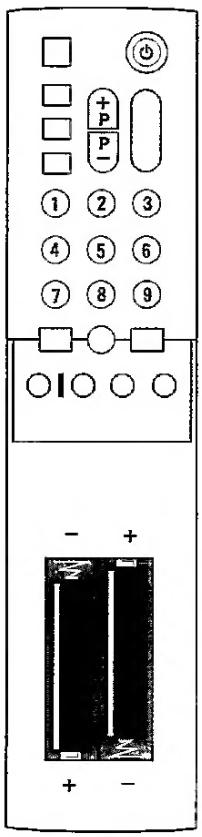

Remote control

- ◦ Slide down the battery cover, as shown on drawing A on the inside cover.
- ◦ Insert the batteries, as indicated on the remote control.
- ◦ Slide up the battery cover.

To support the portable use of the TV, the remote control can be attached on the front of the TV as indicatad on drawing B on the inside cover.

Switching TV on

- ◦ Press ⏻ on the front of the TV.
- ▷ The TV is switched on.
  Is the TV still switched off? Then the TV is on Stand-by.
- ◦ Press P — or + or a digit button on the remote control, or — or + on the TV, to switch on tha TV.

Stand-by

- ◦ By pressing ⏻ on the remote control you can temporarily switch the TV off.
- ◦ Press P — or + or a digit button on the remote control, or — or + on the TV, to switch on the TV again.

Automatic switch off

If aftar a period of 15 minutes no aerial signal is received, the TV automatically switches to Stand-by.

Switch off your TV overnight instead of leaving it on Stand-by. You save energy and tha picture tube is demagnetised which favours good picture quality.

Downloaded from www.Manualslib.com manuals search engine

2 Storing TV channels

59 TV channels can be stored on program numbers. Write down the TV channels and the assigned program numbers while storing.

Follow carefully steps **a, b, c, d, e.**

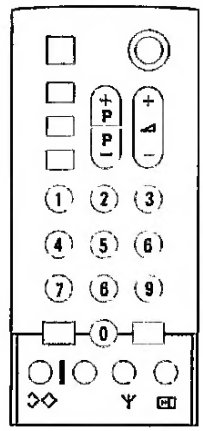

a.
- Press ◇◇.
- ▹ The current program number and the TV-system are displayed on the screen.

b.

You can select e different TV-system for each separate program number.
You can select among the following TV-systems:

Region	TV-system	Used in
EUROPE	PAL BG - SECAM BG	West European countries except France, except United Kingdom and Ireland.
FRANCE	SECAM L L'	Frence.
UK	PAL I	United Kingdom and Ireland.

- Press Y one or more times to select the required TV-system.

c.
- Press ⏭ to start the search.
- ▹ The TV automatically searches until a TV channel is found.
- If you want to continue searching for a specific TV channel then press ⏭ again.

d.
- Press P — or + or one or two digit buttons to select the program number (1 to 59) where you want to store the TV channel.
- ▹ The selected program number is displayed on the screen.

The sound-volume of some TV channels can be somewhat higher or lower than normal. If neccessary, you can adjust the sound-volume for this specific TV channel to normal sound-volume, by pressing ◿ — or +.

e.
- Press ◇◇ to store this selection.

REPEAT Repeat steps **a, b, c, d, e,** until all the TV channels you require have been stored on program numbers.

Storing TV channels can be stopped by pressing ◇◇.

Downloaded from www.Manualslib.com manuals search engine

Auto Programming

The Auto Programming function can be used to find and store all available channels quickly. Channels are stored on program numbers in the same sequence as they ere found.
After Auto Programming is started, the TV starts searching for a channel. If e channel is found, it will be automatically stored on program number 1. Searching will start again automatically. If another channel is found, it will be stored on program 2, etc.

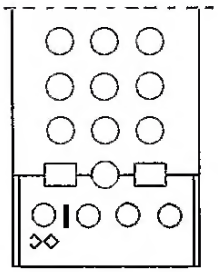

Your TV can receive different TV systems. With Auto Programming the TV searches automatically through all TV systems and stores all TV channels available.
The TV systems are automatically selected as in the following sequence and channels in those TV systems are searched for automatically:

1 - TV system FRANCE (SECAM L L')
2 - TV system EUROPE (PAL /SECAM BG)
3 - TV system UK (PAL I)

At the end of the Auto Programming cycle the TV switches to program 1.

- Press ◇◇ longer than 4 seconds to start the Auto Programming.

The Auto programming is stopped by pressing ◇◇.

Operation

On Screen Display

The On Screen Display information allows you to see the program number on which a TV channel is stored, the timer stetus, end e moving bar if the volume is adjusted.

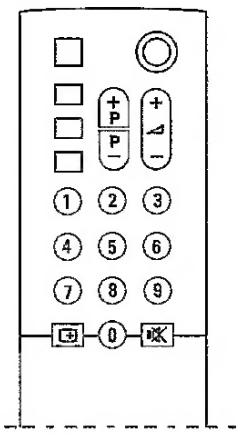

- Press ⊡ to display information on the screen.
- Press ⊡ again to switch off informetion.

Selecting TV channels

- Press P — or + or press one or two digit buttons on the remote control.
  To select a program number from 0 to 9 press one digit button.
  To select a program number from 10 to 59 you must press two digit buttons in less than 4 seconds.

or

- Press — or + on the TV.

Volume control

- Press ◿ — or + on the remote control.

Interrupting the sound

- Press 🔇 to switch off the sound.
- Press 🔇 again or ◿ + to switch on the sound.

Downloaded from www.Manualslib.com manuals search engine

Menu on screen

With the menu on the screen you can change and store the picture and sound settings. Also you can set the timer.

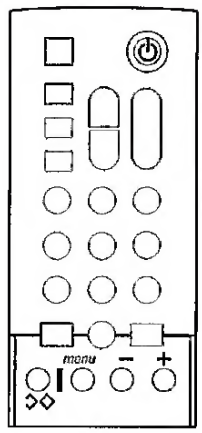

When you switch on your TV, the picture and sound settings have certain veluas. Thase values are initially stored by the factory. Using the menu on screen you can change these values. Also if you store these values (by pressing ◇◇ efter a change), the TV will switch on with your stored picture and sound values.

- Press MENU on the remote control or M on the TV.
- ▹ **VOLUME** appears, adjust the volume by pressing — or +.
  If you want to store this setting press ◇◇.

- Press MENU or M again.
- ▹ **BRIGHTNESS** eppeers, adjust the brightness by pressing — or +.
  If you want to store this setting press ◇◇.

- Prass MENU or M again.
- ▹ **CONTRAST** appears, adjust the contrast by pressing — or +.
  If you want to store this setting press ◇◇.

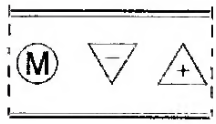

- Press MENU or M again.
- ▹ **COLOUR** appears, adjust the colour by pressing — or +.
  If you want to store this setting press ◇◇.

- Press MENU or M again.
- ▹ **TIMER** appeers.
  The timer can be used to switch on or off the TV automatically after the time you want. You can set the time after which tha TV switches on or off in steps of 10 minutes, to a maximum of 24.00 hours.

  Switching off automatically:
  - Press — or + to select the time after which the TV should switch off. The count down starts immedietely. You cen see the remaining time by pressing ⊡ on the remote control.
    During the final minute of the selected time period, the seconds remaining are automatically shown on the screen.
    At the end of this time period the TV switches to stand-by mode.

  Switching on automatically:
  - Press — or + to select the time after which the TV should switch on. The count down starts immediately.
  - Press ⏻ to switch the TV temporarily off.
  - ▹ The TV will switch on after the time you have selected.

  Note: If you switch on your TV again before the selected time has elapsed, the timar will ba switched off automatically.

  If you do not press any button within 3 hours after the TV has switched on automatically, the TV will switch automatically to Stand-by egein.

If you want to stop the TIMER press — or + until the selected period on the screen is 00.00.

- Press MENU or M again.
- ▹ The menu disappears.

If you want to leave the menu, for example after changing the contrast setting, you can either wait approximately 15 seconds or continue to press the MENU *button until the menu disappears from the screen.*

Downloaded from www.Manualslib.com manuals search engine

Teletext

A number of TV channels broadcast information via teletext. Teletext is an information system which can be consulted the same way as a newspaper or magazine.

Switching Teletext On and Off

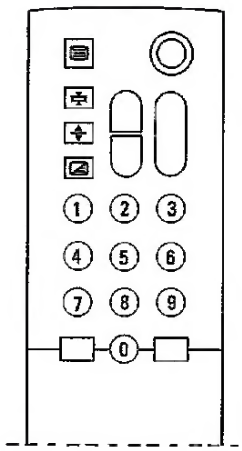

- Select the TV channel for the desired teletext broadcast.
- Press to switch on the teletext.
- The contents appear on the screen together with an information line at the top.

In the information line appears:
- the number of the page requested.
- the page counter.
- date and time.

- only **P. 100** if there is no teletext broedcast.

- Press again to switch off the teletext.
- The TV channel reappears.

Selecting a Teletext Page

- Enter the desired page number with the digit buttons. The number of pages always includes 3 digits.
- The page counter seeks the page.
- If the counter keeps searching, then the page is not available or does not exist.

Does **P ?...** *appear or have you entered an incorrect number?*
First complete the number with random figures and then enter the correct page number egain.

Special teletext functions

Hold
A heading or subject sometimes contains several pages. In this case they are eutomatically displayed in rotation. The total number of subpages end tha subpage displayed are indicated on the screen. For example: 1/4, meaning page 1 out of 4 is being displayed.
- Press to hold a page.
- appears in the information line.
  The information in this subpage is not being updated anymore.
- Press again.
- The page rotation starts again.

Enlarge
- Press to enlarge the top helf of the teletext page.
- Press again to enlarge the bottom helf of the teletext page.
- Press once more to return to normal page size.

Overlay of the teletext on the TV image
- Press .
- The teletext page is superimposed over the TV program on the screen.
- Press again.
- Only the teletext page is displayed.

Downloaded from www.Manualslib.com manuals search engine

Peripheral connections

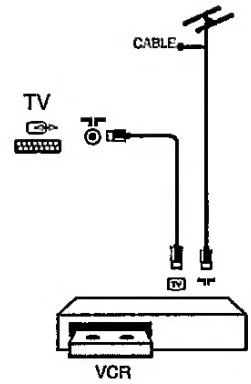

Aerial connection

You can connect your videorecorder or other equipment via the aerial connection on the back of the TV.

- Unplug the aerial plug from your TV and insert it into the aerial input of your equipment.
- Connect another aerial plug to the output TV of your equipment, connect the other side to the aerial input of your TV.
- Switch on your equipment.
- Check in the handbook of the particular equipment to see what the test signal looks like.
- Now, refer to the section **Storing TV channels** to search for and store this signal on a programme number. After that, you can receive signals from your equipment on this programme number.

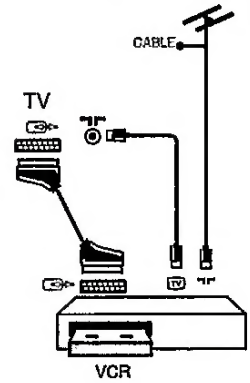

Euroconnection (scart) for e.g. videorecorder

You can connect for example a videorecorder or satellite tuner to your TV via the euroconnector socket on the back of the TV. Ask your dealer for the appropriate cable.

- Connect the eurocable to the euroconnector socket of your videorecorder or electronic equipment and to the euroconnector socket of your TV.
- Connect an aerial cable to the output TV of your video recorder and to the aerial input of your TV.
- Normally if the electronic equipment is switched on, the picture will automatically appear on the TV screen; if not select program number 0.

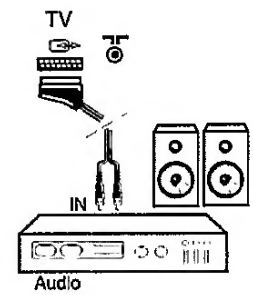

Euroconnection (scart) for audio amplifier

An external audio amplifier can be used to listen to your TV sound.
In this case you need a special euroconnector cable, provided with audio out plugs. Ask your dealer for an appropriate cable.

- Connect the audio plugs into the audio input of your audio amplifier.
- Connect the euroconnector into the euroconnector socket of your TV.

Headphones

- Connect the headphones plug to the headphones socket on front of the TV.

▷ The internal loudspeakers of your TV are automatically switched off.

Tips

Poor or no picture:

Are the plugs tightly connected to the aerial socket and are the connection facilities to any other installed TV in good condition?
Do you use good quality aerial connectors and cables?
If an indoor aerial is used, refer to the section "Installation" to improve the reception.

Remote control is not working properly:

Probably the batteries are flat, replace the batteries.

No picture from electronic equipment connected via euroconnector:

Did you try selecting program 0?
Is the electronic equipment switched on and is START or PLAY pressed?

No solution:

Switch your TV off and on again with the ⏻ button.
Never attempt to repair a defective TV set yourself.
Switch off the TV and call your dealer or TV-technician when nothing helps or when: - A white horizontal stripe appears across the whole screen.
- The red lamp below the screen starts blinking when no buttons are pressed on the remote control.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Pick location	Item	Invoicenumber	Wave	Sort location
4B6-X20-D2	1006	5573951-0003	03	08-010

Cust.code	Quantity
	1

	Stock	Invoice and ship to	Order	Date
" 1958	70	380737 170866	171297	513

Qty. SPQ	Service code	Description	SPQ
1	4822 736 53247	DIRECTIONS FOR USE	1

Le copieur

Made in:

Mr Dierckx-Peeters

Downloaded from www.Manualslib.com manuals search engine

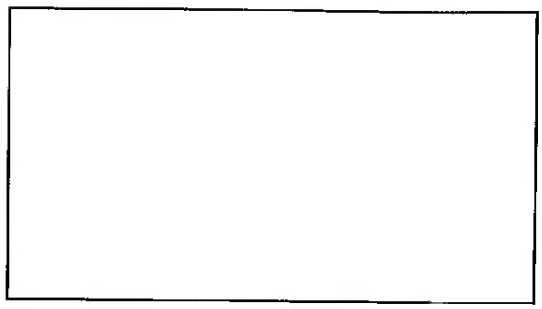

Printed in Italy by G.S.F. 92/12

14AA3527

RC 3119 105 2130.1

Downloaded from www.Manualslib.com manuals search engine